

Insta- TEST®


25 Pool & Spa
Test Strips

PEROXIDE

 **LaMotte**
Just **DIP & READ!**



Immerse test strip and
remove with pad face up.
**DO NOT SHAKE OFF
EXCESS WATER.**
Immediately compare to
color chart.

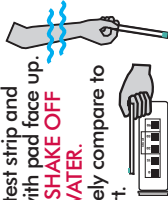

Code 2984

Made in
USA

- | Keep wet fingers out of the bottle.
- | Close cap tightly after removing strip.
- | In pools, immerse strip to a depth of 6".
- | In spas, turn off jets and immerse strip to a depth of 6".
- | For best results read in natural daylight.
- | Store in a cool, dry place.

LaMotte Company
Chestertown, MD 21620
www.lamotte.com/insta

