


Operation Manual for Hand-held Refractometer for the prediction of Wine-Alcohol in grape juice

RW0025 / RW4025 / RW4440 / RW3230 / RW3225

Product Layout

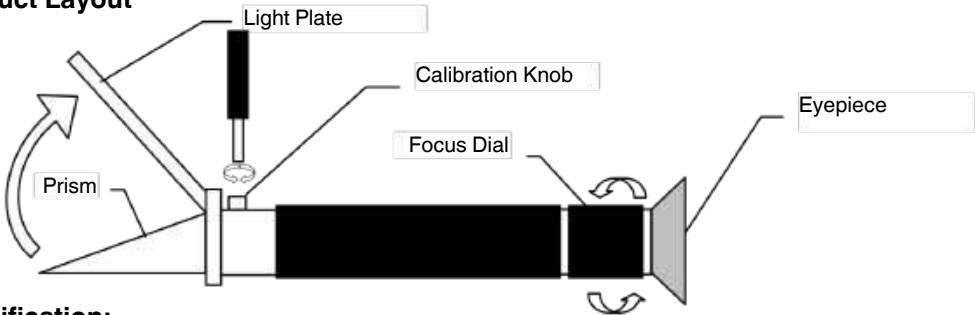

Specification:

Model:	RW0025	RW4025
Measuring range:	0 ~ 25% alcohol prediction	0 ~ 25% alcohol prediction
Display Resolution / Accuracy:	±0.2%	0 ~ 40 Brix ±0.2%

Model:	RW4440	—
Measuring range:	0 ~ 44% Brix	0 ~ 19 °Oe
Display Resolution / Accuracy:	±0.5%	±2.0 °Oe
		0 ~ 40 °KMW ±0.5 °KMW

Model:	RW3230	
Measuring range:	0 ~ 32% Brix	30 ~ 140 °Oe
Display Resolution / Accuracy:	±0.2%	±1.0 °Oe

Model:	RW3225	
Measuring range:	0 ~ 32% Brix	0 ~ 25 °KMW
Display Resolution / Accuracy:	±0.2%	±0.2 °KMW
	0 ~ 140 °Oe ±1.0 °Oe	

Temperature Compensation: Automatic from 10 to 30degree Celsius.

Calibration:

1. Calibrationshould be made in an ambient environment of 20degree Celsius. Open
2. theLight Plate & place few drops of distilled water ½ fill the prism. Close theLight
3. Plate. Ensure the water is spread across the entire surface of the Prism.There must not be any bubbles or dry spots on the Prism, which is cause bytoolittle
4. liquid use. Wait forabout 30 seconds; this is to allow the temperature compensation to take place. Hold themeter in the direction of light source and
5. look into the Eyepiece.
6. Adjust theFocus Dial until image is clear and sharp. Each person has his own
7. focusingadjustment. Removetherubber cap on the Calibration knob, with the use
7. of the provided trimmingtooland adjust it until the bottom line of the blue section is at 0%.
8. CalibrationCompleted.
9. Wipe driesthe Light Plate and Prism with soft lint-free clothes before proceedingwith measurement.



Making Measurement:

1. Open the light plate & place 2 to 3 drops of the wine liquid on the prism.
2. Close the Light Plate. Ensure the water is spread across the entire surface of the Prism. There must not be any bubbles or dry spots.
3. Wait for about 30 seconds; this is to allow the temperature compensation to take place. (ATC models only)
4. Hold the meter in the direction of light source and look into the Eyepiece.
5. Select the scale, which is the intended unit of measurement.
6. Take the reading from the scale on the line where the darkest blue and white area meets. Disregard faint or white lines
7. Wipe dry the Light Plate and Prism with a soft lint-free cloth after each and every test and before storing away.
8. It is important to maintain the Light Plate and Prism dust and stain free in order to have good repeatability measurement.



Precautions in Usage:

1. Clean the instrument between each measurement and before storage with a soft cloth.
Residue of samples stained on the prism could damage the coating on the prism.
2. Do not measure with abrasive or corrosive chemicals. This will damage the prism's coating. Do not immerse the instrument in water.
3. If the view inside the Eyepiece becomes foggy, water has entered into the body.
Call a qualified service technician or contact your dealer. Do not clean the prism with thinner as this will remove the special coating on the prism and damage the unit.
4. Do not store the instrument in a damp environment. Store only in a cool and dry environment.
6. This is an optical instrument and requires careful handling and storage. With care, this instrument will provide years of reliable service.

TRANS INSTRUMENTS
for the professionals



A Product of Singapore

www.caresourceglobal.com