



The Ultimate Fresh & Salt Water Analyzer
for Aquariums and Aquaculture applications



Up to 8 Tests in 2 Minutes!
Ready to go anywhere!



WaterLink® SpinTouch® FX

Every now and then a technology emerges that changes people's lives. For people who test water, that time is now.


Available Tests:

Alkalinity
Ammonia
Calcium
Hardness
Magnesium
Nitrate
Nitrite
pH
Phosphate

Up to 8 tests
in 2 Minutes!

- Reliable Results
- Super Fast & Simple
- Auto-Record Keeping
- Rugged and Portable

The innovative **WaterLink® Spin Touch® FX** photometer does all your freshwater, saltwater and brackish water testing for you. Each sealed reagent SpinDisk® contains the precise amount of reagent needed to run a complete series of tests for each of these water types. Just fill one unique SpinDisk® with less than 3 mL of water and all your vital tests are done automatically—in just 2 minutes! It's the most advanced system for wet chemistry methods ever produced. Now analysts can achieve test results without time consuming test and clean-up procedures. This ground-breaking analysis system is so simple anyone can use it! No vials to fill, no prep time, no guessing!

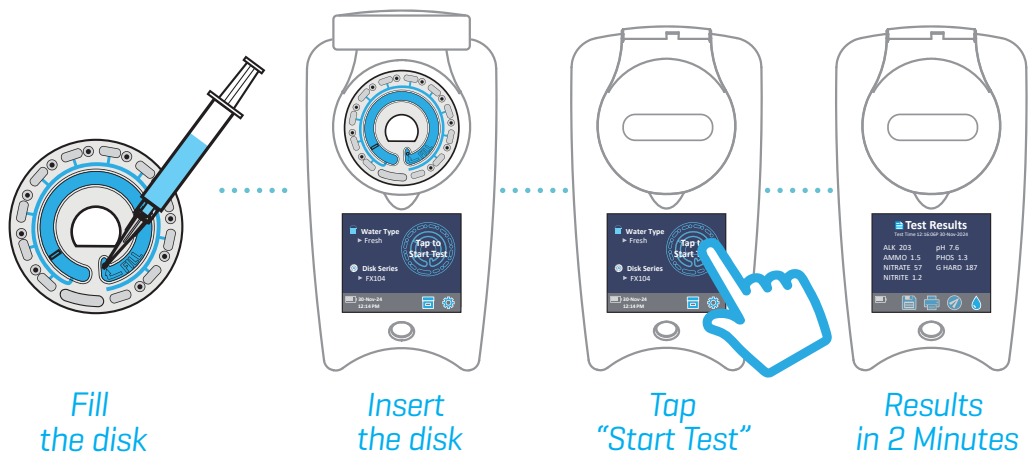

So Simple! So Fast!


Proven analytical chemistry has combined with **Centrifugal Fluidics Photometry** to create the breakthrough **WaterLink® Spin Touch®**



The Device *Precise analysis of up to 8 parameters in 2 minutes!*



Order Code 3589

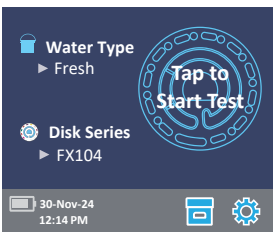

Reliable Results

- Virtually Eliminates User-Error
- Pre-Measured Reagents
- Exact Reaction Time and Auto-Blanking
- Meter Calibration Check System
- 6-Wavelength Photometer

Super Fast & Simple

- 2 Minutes for up to 8 Complete Tests Using One Disk
- Fill Disk and Insert > Tap "Start Test" > Read Results

Data Logging

- Stores Test Dates, Times, Results, and Location
- Download via USB to PC

Stand-Alone or Cloud-Connected

- Touchscreen Operation
- Connect to WaterLink® Solutions via Bluetooth®

Rugged and Portable

- Innovative Water-Resistant Housing
- Internal, Rechargeable Batteries

Instrument Type:	Photometer
6 Wavelengths:	390 nm, 428 nm, 470 nm, 525 nm, 568 nm, 635 nm
Display:	Color Capacitive Touchscreen, 3.5", 320 X 240 pixel resolution
Languages	English, French, Spanish, German, Italian, Portuguese, Dutch, Swedish, Turkish, Chinese
Batteries:	Lithium Ion, Rechargeable (Full Charge in 10-12 hours), 150 tests per charge
Communication:	Bluetooth, USB-C
Calibration:	Factory Set, Field Calibration via Internet Connection
Data Storage:	Last 250 Test Results with Date, Time, Location
Water Resistance:	Rubber Co-molded Base, Rubber USB Port Plug, Gasketed Display & Hinge
Size & Weight:	22.6 L x 12.7 W x 11.4 H cm; 0.79 kg; 8.5 L x 4.9 W x 4.1 H inches; 1.74 lb
Operation:	Single On/Off/Reset Button with Indicator Light, Touchscreen
Firmware:	Internet updateable (New Test, New Test Calibrations, etc.), requires USB connection to Windows® PC
Printer:	Optional Bluetooth® Printer (Code 5-0067); 384 dots per line at 8 dots/mm resolution
Certification	CE

Bluetooth® is a registered trademark of Bluetooth® SIG, Inc.

The Complete Lab

WaterLink® Spin Touch® FX Order Code 3589

Includes: Photometer, Instruction Manual, Quick-Start Instructions, 3 Syringes, Meter Check Disk, Disk Cover, Sample Bottle, USB Cable with AC Adapter, Carrying Case [Disks sold separately]





SpinDisks come individually packaged in foil pouches in boxed packs of 50.

Freshwater FX104 (Code 4353-H) | 50/box

Test Factor	Display Abbreviation	Range	Accuracy	Method Detection Limit
Alkalinity	ALK/D ALK	0 – 250 ppm/14.0 dKH	± 15%	15 ppm/0.8 dKH
Ammonia	AMMO	0 – 3.0 ppm	< 2.0 ppm: ± 0.2 ppm > 2.0 ppm: ± 0.4 ppm	0.2 ppm
Hardness	G HARD/D HARD	0 – 500 ppm/ 28.0 dGH	± 15%	20 ppm/1.1 dGH
Nitrate	NITRATE	0 – 300 ppm	± 30% up to 125 ppm	5 ppm
Nitrite	NITRITE	0 – 2.0 ppm	± 0.2 ppm	0.1 ppm
pH	pH	4.5 – 10.0	± 0.2	NA
Phosphate	PHOS	0 – 2.0 ppm	± 0.2 ppm	0.2 ppm



Saltwater FX203 (Code 4354-H) | 50/box

Test Factor	Display Abbreviation	Range	Accuracy	Method Detection Limit
Alkalinity	ALK/ALK D	0 – 300 ppm/17.0 dKH	± 15%	15 ppm/0.8 dKH
Ammonia	AMMO	0 – 3.0 ppm	< 1.0 ppm: ± 0.2 ppm > 1.0 ppm: ± 0.4 ppm	0.2 ppm
Calcium	Ca	200 – 800 ppm	± 15%	NA
Magnesium*	Mg	500 – 2200 ppm	± 15%	NA
Nitrate	NITRATE	0 – 60 ppm	± 25%	5 ppm
Nitrite	NITRITE	0 – 2.0 ppm	± 0.2 ppm	0.1 ppm
pH	pH	6.5 – 10.0	± 0.2	NA
Phosphate	PHOS	0 – 2.0 ppm	± 0.2 ppm	0.2 ppm

Brackish Tablet Package (Code 3865-PKG)

For testing brackish water samples use the Brackish Tablet Package with the Saltwater FX203 SpinDisk®.

*Brackish samples will not report Magnesium

Disk Patent No. 8,734,734; FCI Patent No. 8,987,000; TCI Patent No. 8,993,337; FCI EU Patent No. EP2784503 A1

The Optional Software



- Cloud-based and **Free**
- Instantly capture date, time, and test results for each pond or tank
- View in real time water quality test results of each pond or tank
- Monitoring Dashboard* provides alerts and complete water quality history of each pond or tank
- Download free iOS or Android WaterLink® Solutions PRO App for your mobile device
- Sign up for your WaterLink Solutions account at softwarecenter.lamotte.com

*Monitoring Dashboard at nominal monthly charge



802 Washington Ave | Chestertown, Maryland 21620 USA
 Tel: 800-344-3100 or 410-778-3100 | Email: info@lamotte.com
WaterLinkSpinTouch.com | LaMotte.com